

SOLAR LIGHTING SYSTEM WALL AND BUILDING MOUNTING



For assistance please contact
SF INDUSTRIES LLC
1.979.421.9022 ext 7
sales@sfindustriesusa.com
www.sfindustriesusa.com

DATE: 07/2024

REVISION : 001

MODELS COVERED:

SBWMS-3180W

**PLEASE ALLOW 2 DAYS FOR
SOLAR LIGHT TO FULLY CHARGE BEFORE POWERING ON**

General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.

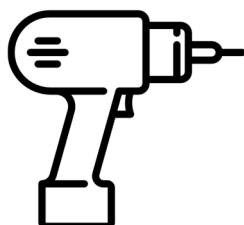
Notes

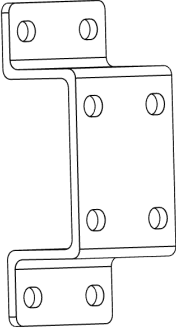
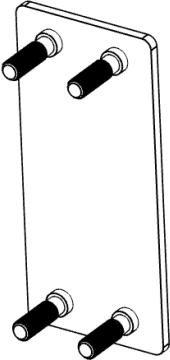
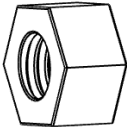
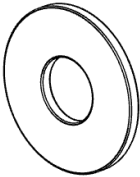
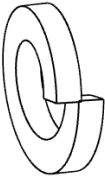
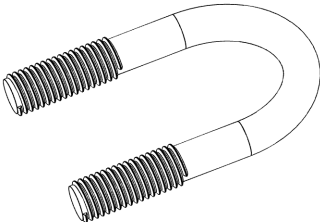
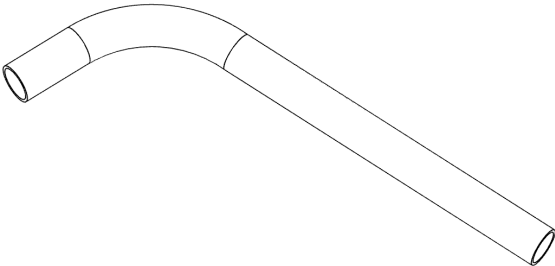
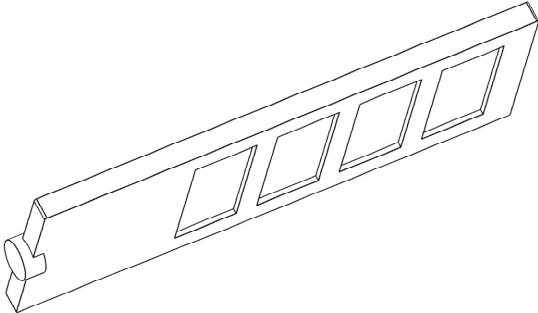
- It is recommended that two adults assemble the product. Please assemble this item strictly according to each step in the instructions.
- During assembly, first loosely fit all components then tighten the when instructed.
- Keep the product away from corrosive chemicals to prevent damage to the surfaces.
- Periodically inspect and clean the fixtures solar panel and LED's.


Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children are not allowed to climb on the product to avoid personal injury caused by the product tilting or tipping over.
- Please do not use the product if there is/are defective and/or missing parts, as this can result in damage or injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- The product should be attached with the included hardware kits.

Tools Required




 X 1	 X 1
 X 8	 X 8
 X 8	 X 2
 X 1	 X 1

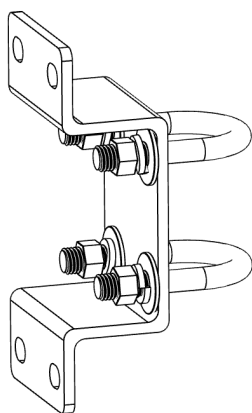


1

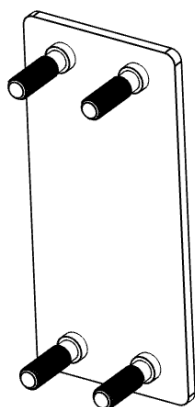INSTALL THE U BOLTS WITH THE SPRING AND FLAT WASHERS




2

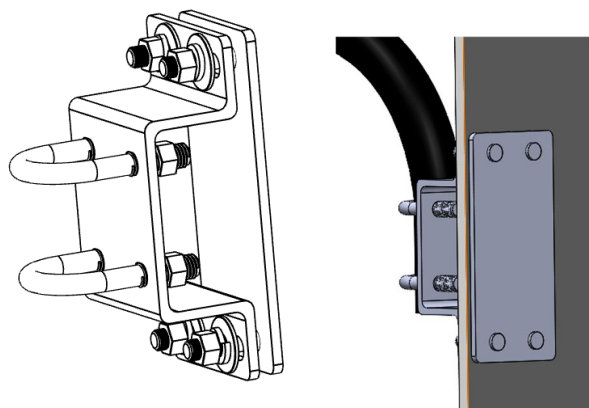USE THE TEMPLATE PROVIDED TO DRILL THE HOLES FOR THE BACKPLATE, PASS THE BOLTS THORUGH THE DRILLED HOLES TO MOUNT THE BACK PLATE FROM THE INSIDE OF THE BUILDING.



3

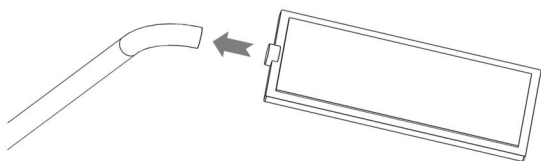
POSITION THE BRACKET OVER THE EXTRUDING BOLTS OUTSIDE THE BUILDING AND ADD THE WAHERS AND NUTS. TIGHTEN IN PLACE.



4

INSERT THE POLE INTO THE SOLAR LIGHT FIXTURE WITH THE SOLAR PANEL FACING UP AND TIGHTEN THE 4 NUTS

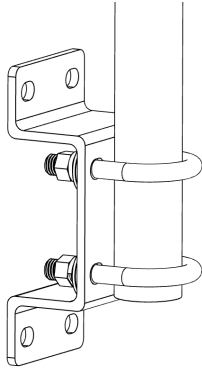5



INSERT THE POLE INTO THE U-BOLTS AND TIGHTEN.

DRILLING TEMPLATE

